

**PREMIER CARBON DIOXIDE INFRARED SENSOR
CERTIFIED VERSION
ppm CO₂ RANGE
TYPES MSH-P-CO₂ and MSHia-P-CO₂**



	Patent Numbers
Great Britain	GB 2 401 432 & GB 2 403 291
Europe	EP 1544603 & EP 1818667-Pending
France	EP [FR] 1544603
Germany	EP [DE] 1544603
Italy	EP [I] 1544603
Switzerland	EP [CH] 1544603
USA	7, 244, 939
	Other World Patents Pending

FEATURES

- ★ Contains all the necessary optics, electronics and firmware to provide a linearized, temperature-compensated output.
- ★ Choice of output format – direct pellistor replacement, industry standard 0.4 to 2 volts dc or digital.
- ★ Provides the option to convert existing compatible pellistor-based instruments to infrared Carbon Dioxide.
- ★ Sensors can be factory configured to customer specification.
- ★ All sensor types are user configurable using configuration equipment available from Dynamant.
- ★ Fast track route for original equipment manufacturers to introduce the latest infrared technology – without any specialist knowledge.
- ★ Internal Flash memory allowing sensor firmware updates via configuration equipment.

Dynamant Limited

Hermitage Lane Industrial Estate · Kings Mill Way · Mansfield · Nottinghamshire · NG18 5ER · UK.

Tel: 44 (0)1623 663636 · Fax: 44 (0)1623 421063

email: sales@dynamant.com · www.dynamant.com

DESCRIPTION

Dynamant infrared sensors operate by using the NDIR principle to monitor the presence of target gas. The sensor contains a long life tungsten filament infrared light source, an optical cavity into which gas diffuses, a dual temperature compensated pyroelectric infrared detector, an integral semiconductor temperature sensor and electronics to process the signals from the pyroelectric detector .

Two versions are available:-

3 Pin Version - Pellistor Replacement Infrared

These sensors provide a pellistor style linearized, temperature-compensated output as shown in Graph 1.


They can either be supplied pre-set to customer specification or may be configured by the user by means of a configuration unit available from Dynamant Ltd. The output signal can be set to rise or fall with increase in the gas level.

5 Pin Version - Multi-Purpose Range

This version of the sensor provides maximum user flexibility by providing the following output options:-

- ★ Industry Standard 0.4 to 2 volt linearized, temperature-compensated output as shown in Graph 2, or alternative voltages for zero and FSD outputs.
- ★ Digital output for direct communications with instrument electronics.
- ★ Rising or falling output with increasing gas level.

The digital output is a UART format comprising 8 data bits, 1 stop bit and no parity. Refer to specification for available baud rates. Contact Dynamant Ltd for protocol details.

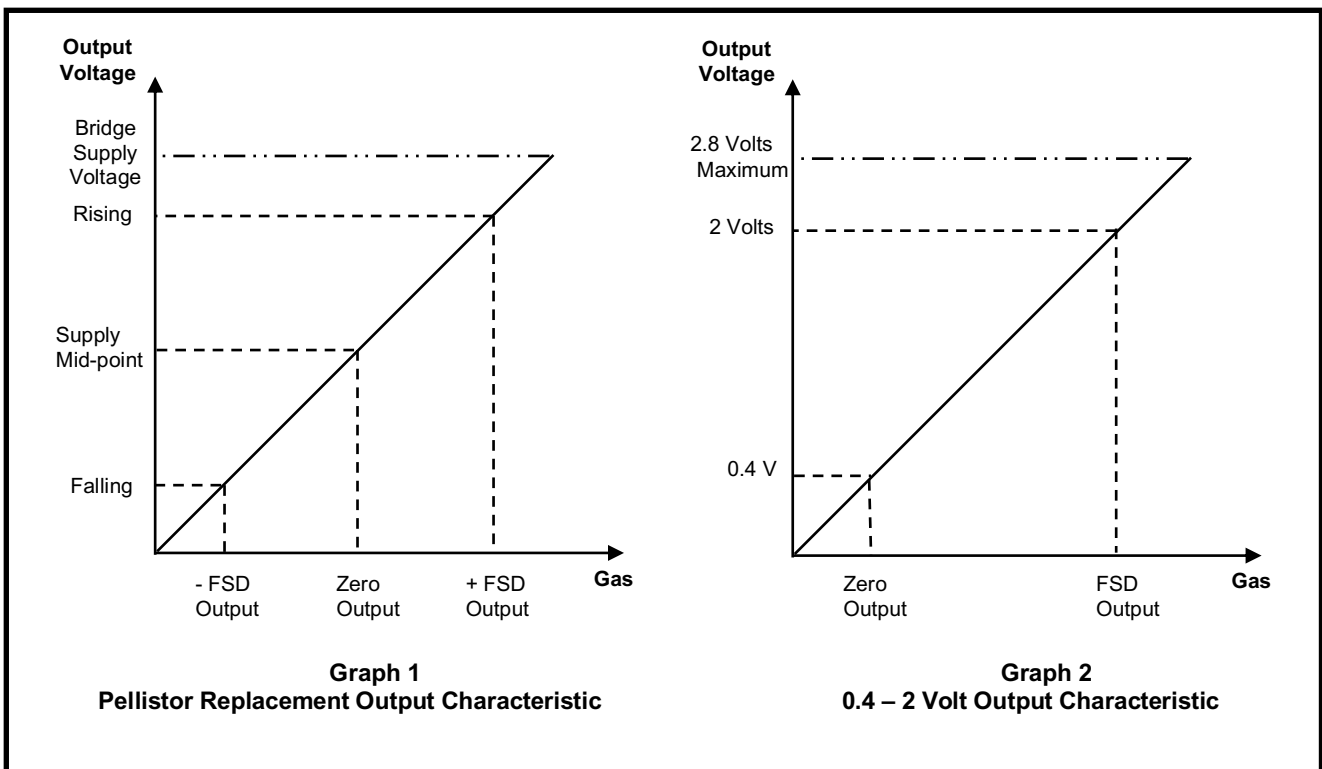


Product range

PREMIER CARBON DIOXIDE SENSORS		
GAS TYPE	SENSOR RANGE	RESOLUTION
CARBON DIOXIDE	0 – 500 ppm	10 ppm from 0 to 250 ppm, then 20 ppm up to FSD
CARBON DIOXIDE	0 – 1000 ppm	20 ppm from 0 to 500 ppm, then 40 ppm up to FSD
CARBON DIOXIDE	0 – 2000 ppm	50 ppm from 0 to 1000 ppm, then 100 ppm up to FSD
CARBON DIOXIDE	0 – 5000 ppm	50 ppm from 0 to 2500 ppm, then 100 ppm up to FSD
CARBON DIOXIDE	0 – 10,000 ppm	100 ppm from 0 to 5000 ppm, then 200 ppm up to FSD

Carbon dioxide Temperature Compensation


The Premier sensor is temperature compensated over the range of -20°C to +50°C. The output variation is $\pm 2\%$ FSD or $\pm 10\%$ of the reading up to 50% FSD and $\pm 15\%$ of the reading from 50% to 100% FSD, which ever is greater.

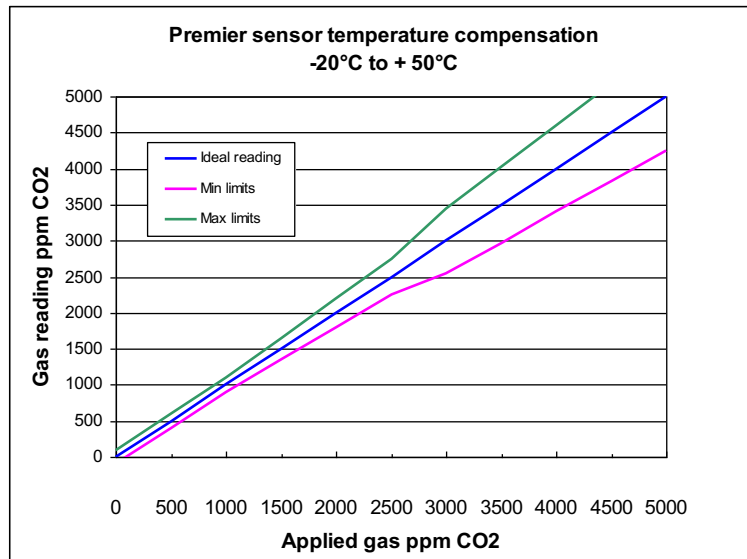

Carbon dioxide Linearity

The Premier sensor linearity at ambient temperature is $\pm 2\%$ FSD or $\pm 10\%$ of the reading whichever is greater.

The following graph is based on the 0 - 5000 ppm sensor, data for 24 sensors.

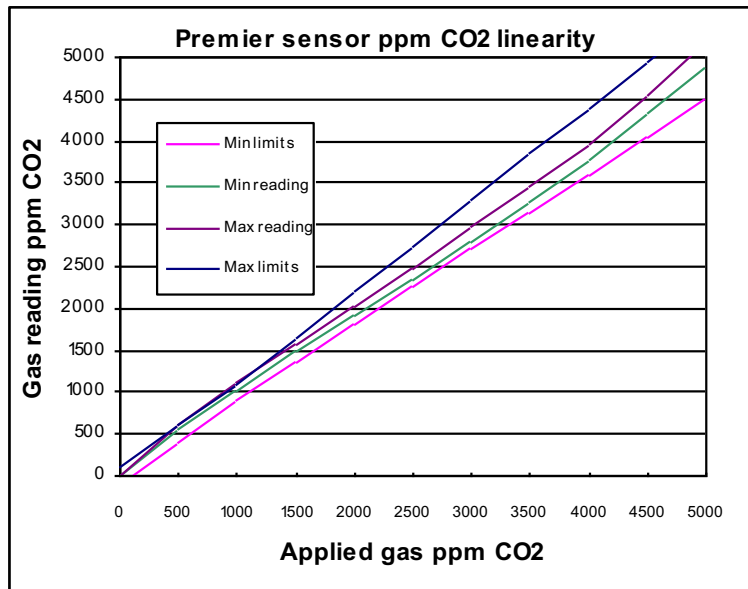

Calibration options

Dynamant recommend a maximum interval of 12 months between calibration checks. A small amount of zero drift can be accommodated by re-zeroing the gas detector against the sensor. The degree of drift that is acceptable should be determined by the user. Note that the subsequent change in gas reading will be greater than the change in zero reading. If the sensor requires either a “Zero” or “Span” adjustment, there are three methods that can be used:

- 1) By using the “Premier Configuration Unit”
When used in conjunction with dedicated PC software, this device uses the data communication pins on the sensor to provide a means of calibration. Refer to data sheet TDS0043 for additional information.
- 2) By using the data communications pins and software written in accordance with the protocol supplied by Dynamant.
- 3) By using the “Manual Calibration” feature available with firmware version 1.5.2R.
“Zero” and “Span” operations can be performed by momentarily connecting the data communication pins to the negative supply pin. Refer to data sheet TDS0064 for full instructions. The “Manual Calibration” option must be specified when the sensors are ordered.

Sensor warm-up time

When power is first applied to the sensor, the voltage at the output pin is held at a pre-determined level. The default setting for this start-up value is the “zero gas” value. This condition is maintained for a default “warm-up” time of 15 seconds, after this time the output voltage represents the calculated gas value. Sensors can take up to 1 minute to indicate the correct gas reading.

Note: the sensor can output any reading from -100% FSD to +200% FSD in the first minute. The output value that is read using the communications pins is always held at zero during the “warm-up” time.

Both the voltage at the output pin during the “warm-up” time, and the duration of the “warm-up” time can be pre-programmed to alternative values at the time of ordering sensors.

Temperature transients and gas flow rates.

The Premier sensor employs a pyroelectric detector, the output from which can be disrupted by sudden changes in temperature. If there is an excessive change in the ambient temperature, gas sample temperature or flow rate, then the output signal will be momentarily frozen. Correct operation is restored when the effects of the transient have settled. Rates of change in the ambient temperature should be restricted to 2°C/minute and gas flow rates kept below 600 cc/minute.

Power supply considerations

The sensor power supply rise time must be less than 50 mS to ensure correct operation. Operation outside the range of 3 – 5 V dc will result in either fault indication, or the sensor will not function correctly.

Sensor over-range condition

The sensor will continue to provide an output up to 200% of the full-scale value; at this point the reading is clamped, regardless of any further increase in detected gas level. The linearity of the output is only guaranteed up to the full scale for the sensor; the over-range condition should therefore be determined and indicated by the host instrument.

Sensor fault indication

The sensor constantly performs checks on the internal memory contents, the incoming supply voltage and the analogue signal values. These checks are used to ensure that the sensor is operating within its correct parameters, and that no internal faults have developed.

If a fault condition is detected:

- 1) the output will be set to 0V.
- 2) The output value that is read when using the communications pins, instead of the voltage output pin, will be set to -250% full-scale.

As mentioned in the “Sensor warm-up time” section above, the voltage at the output pin during the warm-up time can be specified when ordering sensors.

Digital interface

The digital communication pins “RX” and “TX” operate at a 2.8V logic level. When interfacing to external circuitry that uses a higher voltage level it is necessary to limit the current that can flow. The external voltage level should be 5V maximum and a 3K3 resistor should be used in series with each communication pin.

The Rx and Tx voltage limits are as follows:

RX - VIH: Input ‘High’ minimum voltage - $0.8 VDD = 2.24V$

RX - VIL: Input ‘Low’ maximum voltage - $0.2 VDD = 0.56V$

TX - VOH: Output ‘High’ minimum voltage - $VDD - 0.7 = 2.1$


TX - VOL: Output ‘Low’ maximum voltage - $0.6V$

Contact Dynament Ltd for details of the required protocol.

SPECIFICATION

Operating Voltage Range:	3.0 – 5.0 V d.c.
Operating Current:	Constant current operation, current range 75 – 85mA
Programmable Output Voltage Ranges:	Voltage Output Types – 0v to 2.8 volts d.c. Bridge Output Types – 0v to Bridge Supply Voltage
Measuring ranges / Resolution:	0 – 500 ppm / 10 ppm resolution from 0 to 250 ppm, then 20 ppm up to full scale 0 – 1000 ppm / 20 ppm resolution from 0 to 500 ppm, then 40 ppm up to full scale 0 – 2000 ppm / 50 ppm resolution from 0 to 1000 ppm, then 100 ppm up to full scale 0 – 5000 ppm / 50 ppm resolution from 0 to 2500 ppm, then 100 ppm up to full scale 0 – 10,000 ppm / 100 ppm resolution from 0 to 5000 ppm, then 200 ppm up to full scale
Warm up time:	To final zero $\pm 0.2\%$ of range : 1 minute @ 20°C (68°F) ambient
Response Time T₉₀:	<30s @ 20°C (68°F) ambient
Zero Repeatability:	$\pm 2\%$ of full scale @ 20°C (68°F) ambient
Span Repeatability:	$\pm 2\%$ of full scale @ 20°C (68°F) ambient
Long term zero drift:	$\pm 1\%$ of full scale / month @ 20°C (68°F) ambient
Operating temperature range:	-20°C to +50°C (-4°F to 122°F)
Temperature performance:	$\pm 10\%$ of reading up to 50% FSD and $\pm 15\%$ of reading from 50% to 100% FSD over the range -20°C to +50°C (-4°F to 122°F)
Storage temperature range:	-20°C to +50°C (-4°F to 122°F)
Humidity range:	0 to 95% RH non-condensing.
Digital signal format:	8 data bits, 1 stop bit, no parity, 2.8V logic level
Standard baud rates:	38,400, 19,200, 9600
User configurable parameters:	Zero output voltage FSD output voltage Positive or negative going output Sensor 'zero' function Sensor 'span' function
MTBF:	> 5 years
Weight :	15 grams

MECHANICAL DETAIL

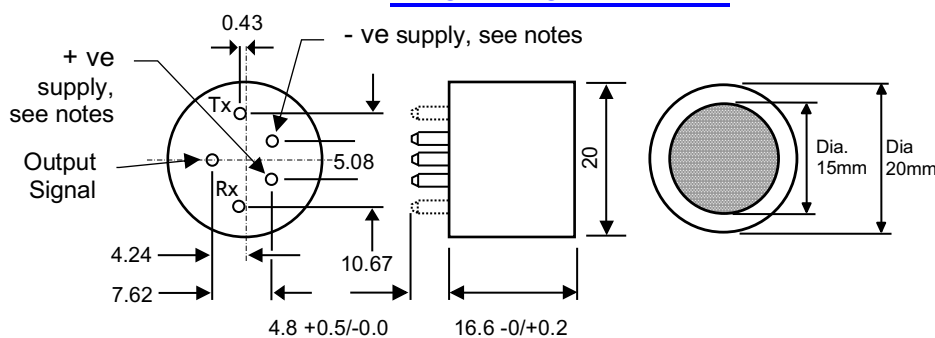

NOTES

1. TOLERANCE: +/- 0.15 UNLESS OTHERWISE STATED.
2. RECOMMENDED PCB SOCKET WEARNES CAMBION LTD CODE: 450-3326-01-06-00.
3. **USE ANTI-STATIC PRECAUTIONS WHEN HANDLING**
4. **DO NOT CUT PINS**
5. **DO NOT SOLDER DIRECTLY TO PINS**
6. THE LABELLING ADDS UP TO 0.2 TO THE OUTER DIAMETER, AND UP TO 0.2 TO THE OVERALL HEIGHT

All dimensions are in millimetres. Pins viewed from underside
 Diameter of pins = 1.5 +/- 0.05
 Tx & Rx communication connections are available as either pads or pins

NOTE – The above pin configuration is shown for the POSITIVE version of the sensor. The NEGATIVE version has the +ve and –ve supply pin positions exchanged. See ordering details.

CERTIFICATION DETAILS

European ATEX Certification	Sensor type MSH-P	Sensor type MSHia-P
Approval body	SIRA	
Certificate Number	SIRA 04ATEX1357U	
Test Standards	EN60079-0:2012+A11:2013, EN60079-1:2014, EN60079-11:2012, EN60079-26:2015	
Certification Codes	I M2 Ex db I Mb II 2 G Ex db IIC Gb	I M2 Ex db I Mb II 2 G Ex db IIC Gb
Input parameters	0.8W max, 30V max. (See footnote)	0.8W max, 30V max. (See footnote)
Operating temperature	-20°C to +60°C (See footnote)	
International IECEx Certification	Sensor type MSH-P	Sensor type MSH-P
Approval body	SIRA	
Certificate Number	IECEx SIR 05.0053U	
Test Standards	IEC 60079-0:2011, EN60079-1:2014 EN60079-26:2014	
Certification Codes	Ex db I and/or Ex d IIC	Ex db I and/or Ex d IIC
Input parameters	0.8W max, 30V max.	0.8W max, 30V max.
Operating temperature	-20°C to +60°C (See footnote)	
North American Certification	Sensor type MSH-P	Sensor type MSHia-P
Approval body	Underwriters Laboratory Inc.	Underwriters Laboratory Inc.
File Reference	E336365	E336365
Test Standards	UL 60079 – 0, 4th Edition UL 60079 - 1, 6th Edition CAN/CSA-C22.2 No. 60079-0-1-7 CAN/CSA-C22.2 No. 60079-1 part 1, 1st Edition	UL913 7th, Edition UL 60079 – 0, 4th, Edition UL 60079 – 11, 2nd, Edition CAN/CSA-C22.2 No. 157-92
Hazardous Locations	Class 1, Zone 1, AEx d IIC and Ex d IIC Hazardous Locations	Class I, II, III, Division 1 Class 1, Zone 0, AEx ia IIC, T4 with 60°C ambient
Input/Entity parameters	0.8W max, 30V max.	Ui=6V dc, Pi=0.8W, Ci=4.105µF, Li=0 mH

Input parameters are defined for certification purposes only, refer to the “Specification” table for the sensor operating voltage and temperature range.

Ordering Details

In order to completely specify the type of sensor that is required, the customer needs to provide the following information:-

- An Order Code (see below) that specifies the sensors' basic physical and electrical characteristics.
- The sensor configuration requirements.


<p>Available sensor options:</p> <p>F = Replaceable, self adhesive microporous PTFE filter</p>	<h3>EXAMPLE OF ORDER CODES</h3> <p>MSH – P / CO2 / 3 / B / P / F</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <p>Option</p> <p>FILTER : BLANK = OMITTED F = FITTED</p> </div> <p>SUPPLY POLARITY : P = Positive N = Negative</p> <p>OUTPUT TYPE : B = Bridge V = Voltage</p> <p>NUMBER OF PINS : 3 or 5</p> <p>GAS TYPE : CO2 = Carbon dioxide</p> <p>PREMIER SENSOR</p> <p>TYPE MSH or MSHia (For Mining M1 applications only)</p>
-------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

CONFIGURATION OPTIONS


(To be stated on customer order in addition to the Order Code)

1. Output voltage for zero.
2. Output voltage for span.
3. Rising or falling output voltage with increasing gas level.
4. Sensitivity
5. Communication speed – 38,400 baud (default), specify alternative rate if required.

Pellistor Replacement - Explanation of Positive & Negative Polarity

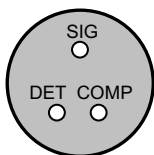


Typical Pellistor Pinout

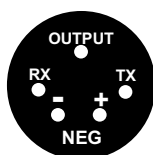

Premier Negative Polarity Option

Use where the DET pin of the existing pellistor is connected to the Negative of the pellistor bridge supply.

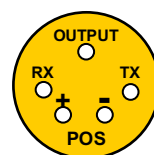

Premier Positive Polarity Option

Use where DET pin of the existing pellistor is connected to the Positive of the pellistor bridge supply.

Note – On the 3 pin version of the sensor, the RX and TX connections are pads, not pins.

Warranty information

All Dynament Premier sensors carry a five-year warranty against defects in materials and workmanship. The warranty is invalidated if the sensors are used under conditions other than those specified in this data sheet.

Attention should be paid to the following criteria:

- **Observe the correct supply polarity**
- **Do not exceed the maximum rated supply voltage of 5V**
- **Do not solder directly to the sensor pins**
- **Do not expose the sensor to corrosive gases such as hydrogen sulphide**
- **Do not allow condensation to take place within the sensor**

Dynament reserve the right to alter technical specifications, without prior notice, when it is appropriate to implement a technical enhancement that leads to improved performance. Should any changes be required that could affect the customer's use of the product, Dynament will endeavour to contact customers directly to inform them of the changes.